

# High-Caliber 3D and Aerosol Jet Printing with Regenerated Silk Fibroin (RSF)

---

**A new aerosol jet printing method to efficiently fabricate RSF patterns for use in areas such as medicine, food production, and biosensors**

Georgia Tech researchers have developed an innovative process to enable use of regenerated silk fibroin solutions with an aerosol jet printer. This method reliably processes silk fibroin material without the need for chemical additives that may negatively alter the mechanical properties of RSF. Additionally, it demonstrates a reduced likelihood for clogging the printer's nozzle—a typical challenge of other processes, like inkjet printing.

This procedure involves two phases of working with the RSF to print patterns: material preparation and material fabrication. The silk fibroin is first processed from its raw form into a printable liquid solution through a unique progression of degumming, dissolution, dialysis, and centrifugation. The solution is then atomized, and the final parameters are tuned before the printed pattern is finally deposited. In this method, the printer's focus ratio—composed of its sheath and ink rate—is customized to establish an operating window for optimum print quality.

## Summary Bullets

- **High fidelity:** Preserves silk fibroin's advantageous mechanical properties by creating a printable RSF solution without the need for chemical additives
- **High quality:** Identifies the optimum parameters for producing printed patterns with minimal flaws
- **Efficient:** Reduces obstacles (e.g., clogged nozzle and overspray) normally encountered in other processes, like inkjet printing

## Solution Advantages

- **High fidelity:** Preserves silk fibroin's advantageous mechanical properties by creating a printable RSF solution without the need for chemical additives
- **High quality:** Identifies the optimum parameters for producing printed patterns with minimal flaws
- **Efficient:** Reduces obstacles (e.g., clogged nozzle and overspray) normally encountered in other processes, like inkjet printing
- **Broadly applicable:** Expands potential use of silk fibroin material in an array of commercial contexts, including but not limited to medicine, food production, and biosensors

## Potential Commercial Applications

- Medicine
  - Wound treatment
  - Surgery
  - Medical devices
  - Drug delivery and pharmaceuticals
- Food and beverage
  - Packaging
  - Sensors
- Electronics
- Photonics
- Filtration membranes

## Background and More Information

Silk has been hailed as a multi-purpose material for centuries, thanks to its versatile mechanical properties, biocompatibility, and biodegradability. Its use in industries like medicine and food production, however, requires an efficient, non-contact printing method that can produce highly precise patterns. Aerosol jet printing has been identified as a promising technique for developing objects from RSF, as it can process drop volumes much smaller than inkjet printing and with a wider range of viscosity. To address the issues of RSF's low printability in aerosol jet printers, this technology prepares and fabricates RSF material in such a way that—when combined with particular parameters—it can print high-quality samples with more ease and adaptability.

## Inventors

- Dr. Tequila Harris  
Professor - Georgia Tech School of Mechanical Engineering
- Dr. Kyriaki Kalaitzidou  
Associate Chair for Faculty Development, Rae S. and Frank H. Neely Professor - Georgia Tech School of Mechanical Engineering
- Dr. Donggang Yao  
Professor - Georgia Tech School of Materials Science and Engineering
- Yuhan Xiao


## IP Status

The following patent application has published: US20210253881A1

## Publications

[Challenges and Advances in Aerosol Jet Printing of Regenerated Silk Fibroin Solutions](#), Advanced Materials Interfaces - April 27, 2020

## Images

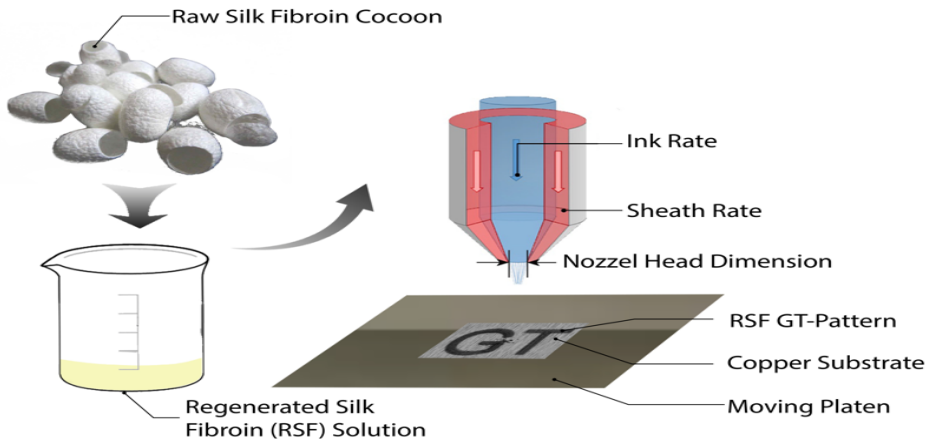

This innovation is a unique method and process for reliably printing regenerated silk fibroin material.

Criteria	Grading 1 (Best)	Grading 2 (OK)	Grading 3 (Worse)	Grading 4 (Worst)	Troubleshooting Result
Cloudiness on or along the edge of pattern					Ultrasonic clean nozzle head for 15min
Skewed overspray					Replace and clean tubing, need to check nozzle.
Less ink deposited					Add more ink
Pooling of ink					Only occurs when degumming time is longer than it should be.
Ink not uniformly deposited					Clean tubing, nozzle, or add more ink

This diagram shows ways to adjust various printer parameters in order to improve print quality in each of the typical troubleshooting areas.

Visit the Technology here:

[High-Caliber 3D and Aerosol Jet Printing with Regenerated Silk Fibroin \(RSF\)](#)

<https://s3.sandbox.research.gatech.edu//index.php/print/pdf/node/3407>